

HAUGER
TIMELESS CRAFTSMANSHIP

CONGRATULATIONS

We would like to congratulate you on having chosen one of our Hauger watches.
With passion for exquisite styles and timeless craftsmanship, our watches are built
with exclusive components from all over the world.

HAUGER
TIMELESS CRAFTSMANSHIP



**WATCH MANUAL
INSTRUCTIONS**



**GOLDEN VALOR
CHRONOGRAPH 42MM**

Our movements are carefully chosen from the best suppliers in Switzerland and Japan. The metal parts are all made of the highest quality polished marine 316L stainless steel. All our watches have anti reflective and scratch resistant domed Sapphire crystal glass. The leather bracelets are made in genuine italian calf leather.

The water-resistance of all Hauger watches are 100m (10ATM)

WATCH SPECIFICATIONS

Technical specifications

Material: 316L Marine grade stainless steel
or Diamond Like Carbon (DLC) coated

Diameter: 42mm without crown

Height: 11.6 with solid back

Length: 48mm lug to lug

Lug Width: 22mm

Finish: Polished

Water Resistance: 100m/330ft

Case Back: Solid steel screwed

Crystal: Domed, scratch-resistant sapphire crystal
with anti-reflective treatment inside.

Dial: Applied luminous indexes

Bezel: Polished

Hands: Sword hands with luminous

Crown: Polished

Bracelet: Stainless Steel with polished butterfly buckle

Watch Case: Delivered with a special customized wooden
watch box

Movement

Caliber: Swiss Ronda 5021D

Functions:
2-eyes Chronograph
Center stop second (1/1 sec)
30 minute counter
ADD and SPLIT functions
Date
Small second

Total Diameter: 12½" 28.6mm

Height: 4.4mm

Jewels: 5 Jewels

Battery: 54 months

Accuracy: -10/+20 seconds per month

Battery specifications

Battery type: 395


Battery voltage: 1.5 V

Battery life: 54 Months

Current consumption – typical: 1.32 µA (Date
Mechanism not in Gear)

Current consumption – maximum: 1.65 µA (Date
Mechanism not in Gear)

WATCH SETTINGS

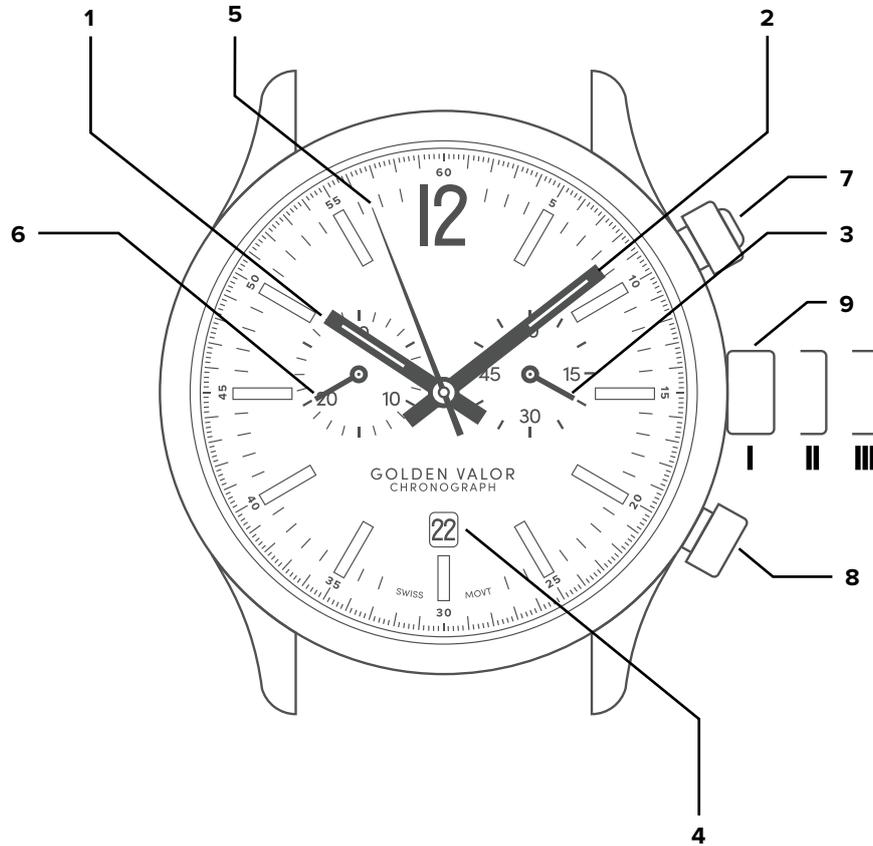

Display and functions

- 1. Hour hand
- 2. Minute hand
- 3. Small seconds hand
- 4. Date display

Chronograph

- 5. Central 60-seconds counter hand
- 6. 30 minute counter hand
- 7. Start/stop push button
- 8. Reset push button on counters

9. Crown with 3 positions

- I. Winding position (not pulled out)
- II. Setting position for date (unscrewed*, half pulled out)
- III. Setting position for time (unscrewed*, completely pulled out)

WATCH SETTINGS

Usage / Settings

Models with a screwed crown

To ensure that they remain water-resistant, some models are fitted with a screwed crown. Before proceeding to setting the time or date*, you must first unscrew the crown before pulling it out to its outer positions.

Important: After each operation, you must always screw the crown back down to ensure that your watch remains water-resistant

Setting the time

Carefully pull the crown into position **III** (3); the watch stops at this point. Turn the crown forwards or backwards until the hands display the correct time.

Advice on how to synchronise your watch

To synchronise the seconds hand (3) with an official time signal (radio/TV/Internet), pull the crown out into position **III** when the seconds hand reaches the 60 second (or 12 o'clock) position. This then stops. At the tone, press the crown back into position **I** (and tighten it down if you have a model with a screwed crown).

Rapid correction of the date*

Important: Do not set the date* between 10pm and 2 am (the movement is in the process of changing date at these times), if your model have a screwed crown.

Pull the crown out into position **II** and turn it backwards until the correct date (4) is displayed. During this operation, your watch will continue to function normally, so you will not need to alter the time.

Note: When setting the time, if the chronometer is engaged, the hand on the 12-hour counter will turn together with the hour hand of the watch.

Chronograph

Chronograph function

Press the Start/Stop push button (**7**) to start the timing operation. Press the Start/Stop push button (**7**) again to stop it. The timing operation restarts when you press the Start/Stop push button (**8**) again (time is added), or the two chronograph hands (**5** and **6**) can be reset to zero by pressing the push button (**8**). This is only used to reset the chronograph hands to zero.

Care and maintenance

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and warm soapy water. After immersion in salty water, rinse it in fresh water and leave it to dry completely.

Do not leave it anywhere where it might be subjected to major variation in temperature or humidity, in direct sunlight or near strong magnetic fields.

To benefit from the highest standards of service and to ensure your guarantee remains in force, please always contact an authorised high-end watch dealer.

The high-quality mechanism of your HAUGER watch will give you complete satisfaction for many years provided that you take proper care of it. However, we would advise you to have your watch inspected every 3 to 4 years by an authorised high-end watch dealer.